

The EZDown installation guide for ISUZU



STABILUS

ISUZU



Kit Components	Parts Description	P/N	Qty
	Cable	ED0103	1
	Cable	ED0103	1
	Damper	162554	1
	Top mounting stud	ED0403	1
	Bottom mounting stud	ED0404	1
	M8 Flush mounting bolt	ED0303	1
	Cable stud	ED0405	3
	2mm Big diameter washer	ED0308	1
	2mm Small diameter washer	ED0005	4
	E Clip	ED0206	2
	WARNING LABEL	ED0006	
	INSTRUCTIONS	ED0009	1

There are two parts of this vehicle that you will be working on:

- A/ Tail gate pillar
- B/ Tail gate bracket hinge

Please note the safety guidelines with reference to loading weight on tailgate after installation of EZDown .

Visit our website at www.ezdown.co.za to see EZDown in action.

Family Safety . Convenience . Easy to assemble and install . Hands free lowering . Eliminates damage to vehicle . Cost effective

STEP 1

Remove the rubber.



STEP 2

Remove the hinge bolt.



STEP 3

Put the big diameter washer onto the bottom mounting stud and screw it into the hinge mounting bolt hole. Don't forget to tighten.



STEP 4

Remove the other hinge mounting bolt.



STEP 5

Replace the other hinge mounting bolt with flush mounting bolt.



STEP 6

Remove the top Steel bar mounting bolt.



STEP 7

Remove the Steel bar mounting bolt. Please keep re-bound rubber bracket handy as this is reused!



STEP 8

Remove the Steel bar mounting bracket bolt, which will now release the whole steel bar.



STEP 9

Please store your OEM Parts.



STEP 10

Put one Cable Stud with a 2mm small diameter washer and insert the re-bound rubber bracket onto the stud and then tighten the stud into the steel bar mounting bracket hole closest to the top of the tailgate as shown in the picture and tighten in place.



STEP 11

Place Top mounting stud through the cable eye and place a 2mm small diameter washer onto the stud and insert it into the steel bar mounting hole, and tighten in place.




STEP 12

Place the damper with Piston rod facing down on the mounting studs.



STEP 13

Attach the E clips in place on the top and bottom studs.

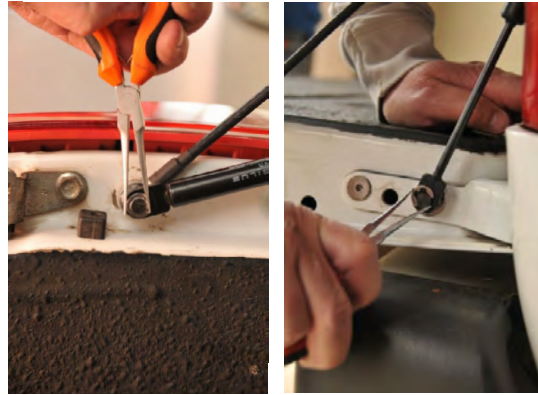

STEP 14

Remove the other side steel bar as per prior steps 6 through to 9.

STEP 15

Put one Cable Stud with a 2mm small diameter washer and insert the re-bound rubber bracket onto the stud and then tighten the stud into the steel bar mounting bracket hole closest to the top of the tailgate as shown in the picture and tighten in place.



STEP 16

Place the last cable mounting stud through the cable eye and place a 2mm small diameter washer onto the stud and insert it into the steel bar mounting hole, and tighten in place.



STEP 17

The cable will now be in place replacing the steel bars.



STEP 18

Open and close the tailgate slowly to check alignment and that the cable does not interfere.



STEP 19

Fit the warning sticker to the tailgate to ensure the tailgate does not get overloaded.

